

FORD TRANSIT FLOOR LINER (2015+)

INSTALLATION INSTRUCTIONS

RECOMMENDED TOOLS

Socket wrench with 1/2" hex head


Cleaning Cloth

BEFORE BEGINNING THE INSTALLATION

1. Refer to the images below and check to make sure all of the listed items were provided.
2. Gather the recommended tools listed above.
3. Read entire instruction sheet before attempting install. Improper installation may void warranty.


NOTES:

- When assembling with a VanGuard Wall Panel or Wheel Well Cover Kit, install the floor panels prior to installing the wheel well covers or wall panels.
- 130" wheel base install shown, 148" wheel base install is the same.
- Installation of floor liners requires 2 people.

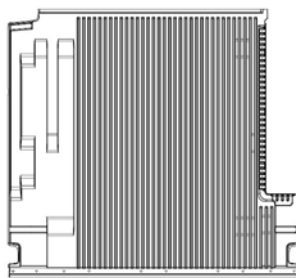

Front Panel

↑
Front

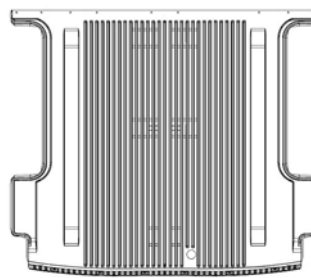


Rear Panel




630072 - Hole Plug



660162 - Adhesive Tape

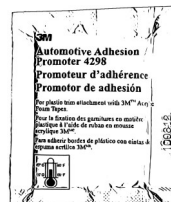

PA0619 - Adhesive Promoter

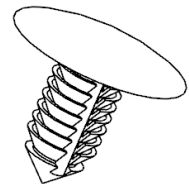

380119 - Tree Fastener



WARNING



Do not use floor liner as a surface for filling a container with flammable liquid as static electricity can build and cause an explosion.



1

Clean bed of any debris with a clean cloth. Remove plastic cap covering spare wheel release at back of floor. Remove plastic wheel well covers (if necessary).




2

Remove the tie down in the front driver side of the vehicle, behind the driver seat

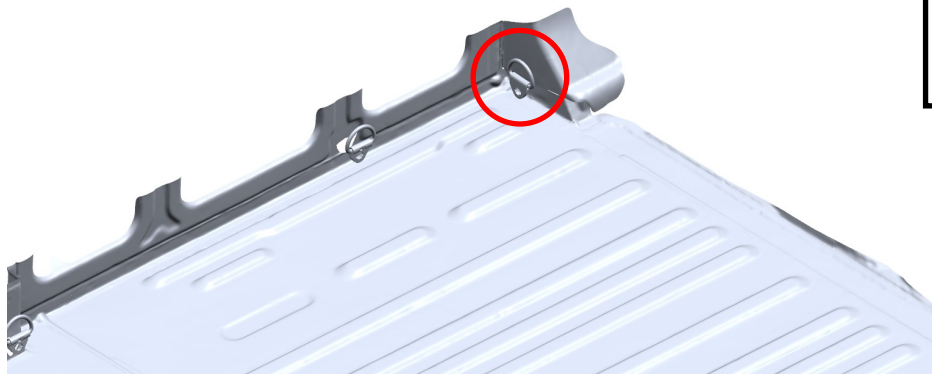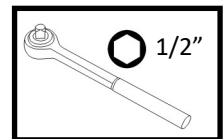


3

Install the rear panel floor liner into the van through the rear doors, keeping one side of the panel high. Tuck the lower side of the panel underneath the tie downs. Lay the panel flat and bend to tuck it underneath the other tie downs.

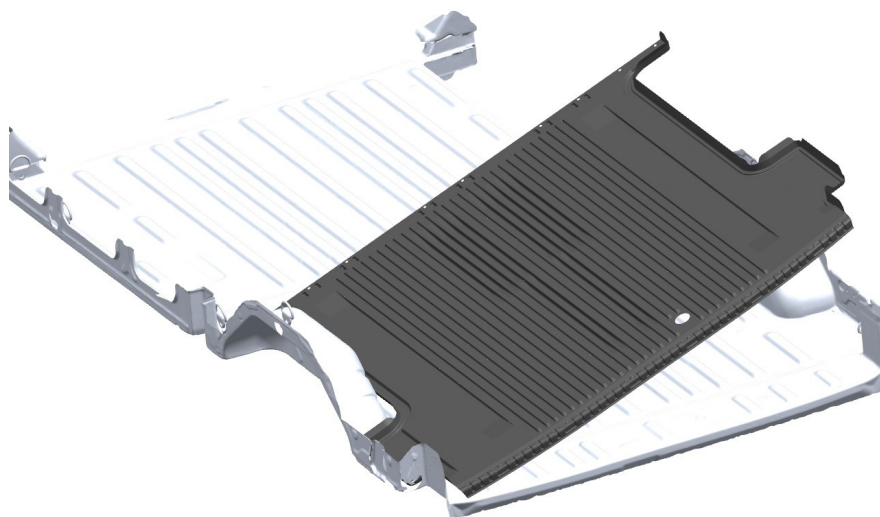


4

Install front panel floor liner into the van through the side door. Keep the door side high and angle the other side down and tuck under the tie downs. Lay the panel flat and bend the corner to tuck the panel under the tie down next to the door opening.

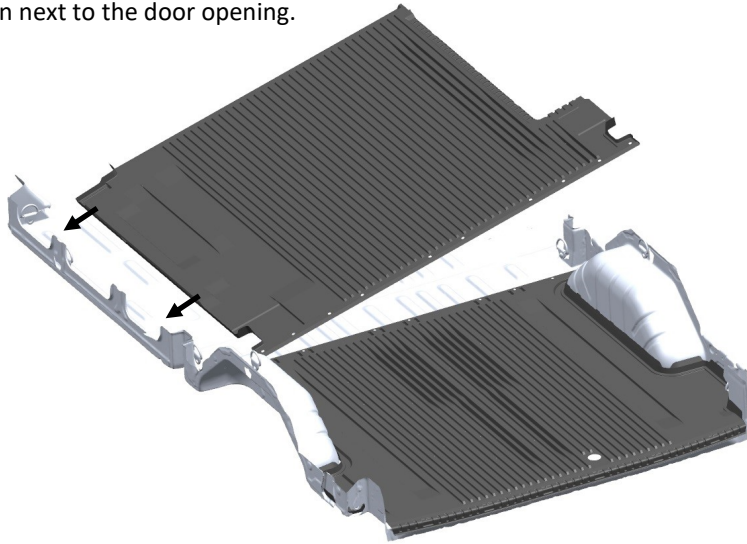


5

Align panels and check that no edges are stuck incorrectly on the tie downs. Insert tree fastener into all 10 holes where the floor panels overlap.

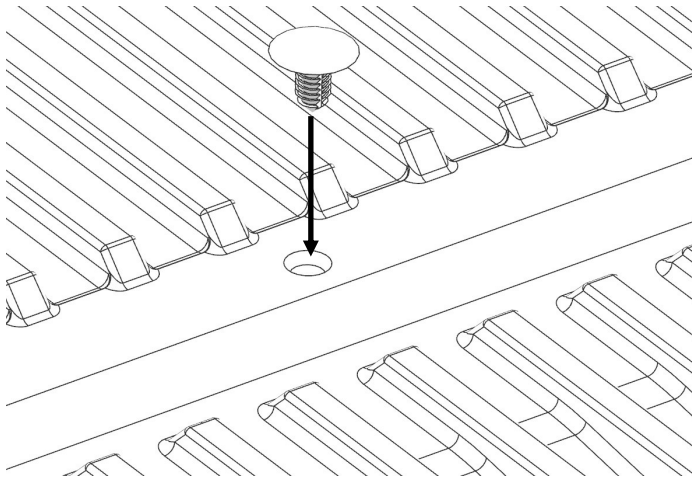



6

Use the adhesive promoter sponge on the sheet metal and floor panel in the places marked below. Allow time to dry and apply the adhesive tape in the same locations.

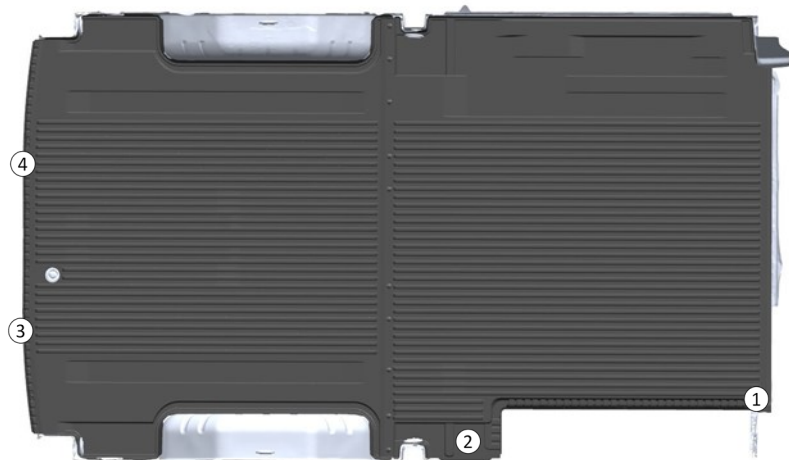


7

Re-install tie down removed in step #2

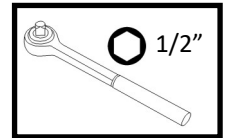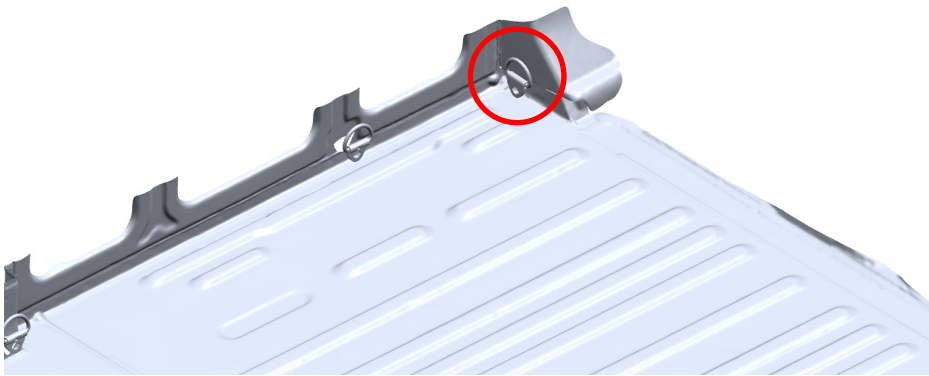

8

Install hole plug in hole at back of rear floor panel.

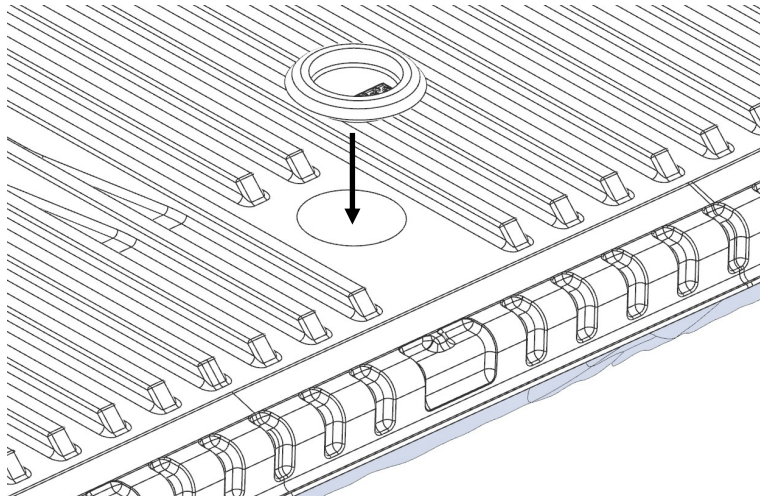

Manufactured By: Penda Corporation

(800) 356-7704

2344 W. Wisconsin St. Portage, WI 53901-0449

www.penda.com